



The pyranometer is mounted vertically on the horizontal equipment bar (approximately at eye level) on the opposite side of the tower that the anemometer is mounted. The pyranometer should be visually checked at least once a month and if there is a buildup of dust, bird excrement, or other debris on the quartz diffuser (top) portion of the sensor the sensor should be cleaned. Clean using a soft cloth and clean water.